


THE VOTE CENTER WORKER'S GUIDE TO VOTING MACHINES

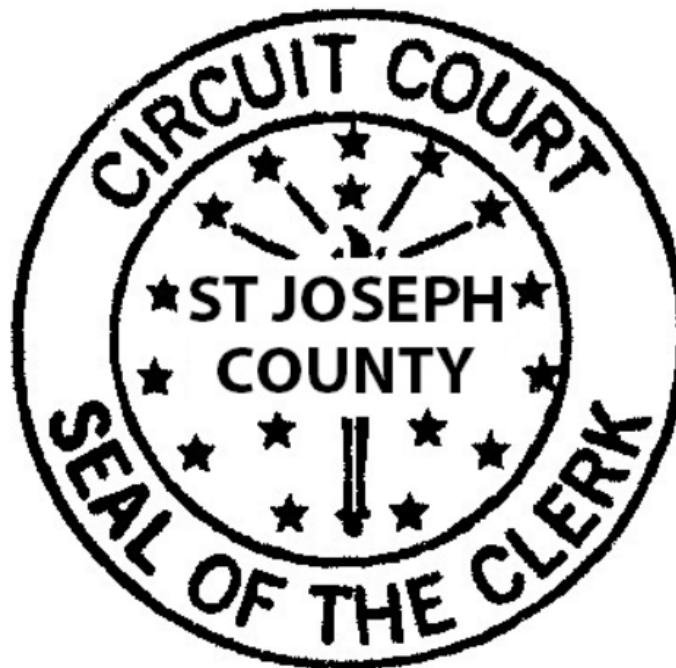

INTRODUCTION TO ELECTION DAY VOTING MACHINES



- 1) The “Freedom vote (FVT)” is the machine that the voter will make their selections and print their ballot on.
- 2) The “Privacy Booth” will act as a table to hold the FVT at a comfortable height for the voter. There will be an equal amount of Privacy Booths and FVTs.



- 3) The Open Vote Optical (OVO) is the machine on top of the ballot box that scans and casts the voter's ballot.
- 4) The ballot box will hold all the other precinct supplies before the polls are open, and will hold the ballots after the polls are open.


VOTING ON AND OPERATING THE FVT/OVO ON ELECTION DAY



The voter will approach the FVT with a QR code (pictured above) that was generated by the pollbook at check-in. This QR code should be given to the judge to activate the ballot on the FVT.



The judge will scan the QR code on the bottom left hand side of the FVT. For best results, make sure the code lines up with the green light (pictured above). The judge will keep the QR code.

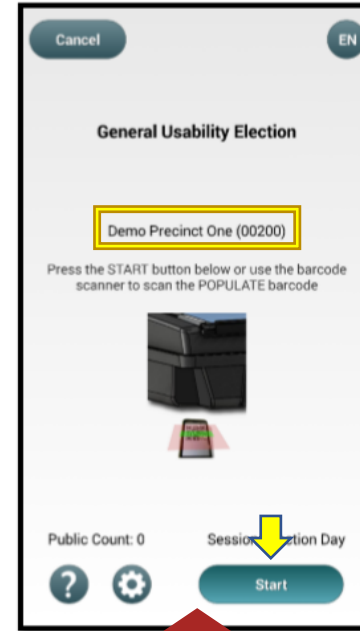

The voter can double check their precinct number and press start to begin voting.


NOTE: The judge should NEVER touch the FVT screen after scanning the QR code.

VOTING ON AND OPERATING THE FVT/OVO ON ELECTION DAY



The voter can make their selections by touching the candidate of choice on the screen. They can move to the next page by swiping the screen to the left or hitting the right arrow in the bottom corner. The page numbers at the top of the screen will indicate how many pages the voter will need to go through.


When the voter gets to the last page of the ballot the “Review” button in the button right will light up. They will need to press that button to move onto the review screen.

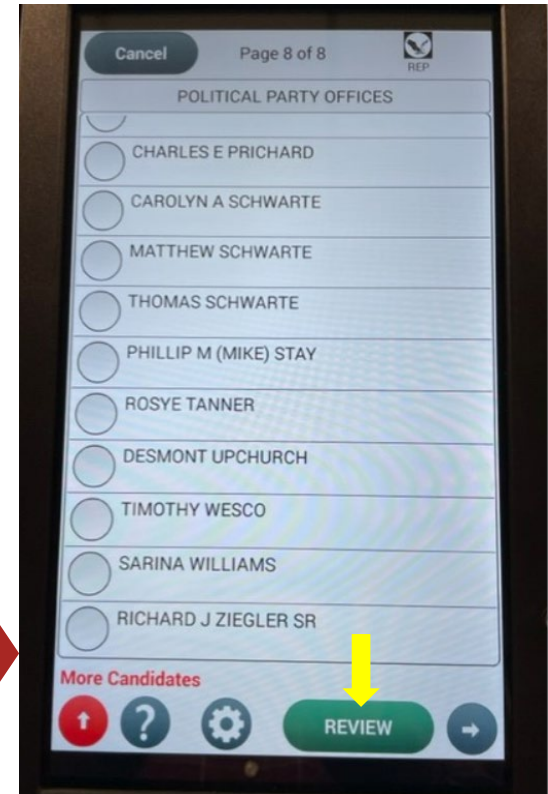

VOTING ON AND OPERATING THE FVT/OVO ON ELECTION DAY



Amy Rotfel

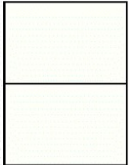


CLERK'S INITIALS



The ballot will need to be taken to the OVO to be scanned. A clerk from each party will need to initial the back of every ballot before it is scanned through the OVO and into the ballot box.



For best results, the voter needs to make sure the light on top of the OVO machine is green before feeding the ballot between the two red arrows.

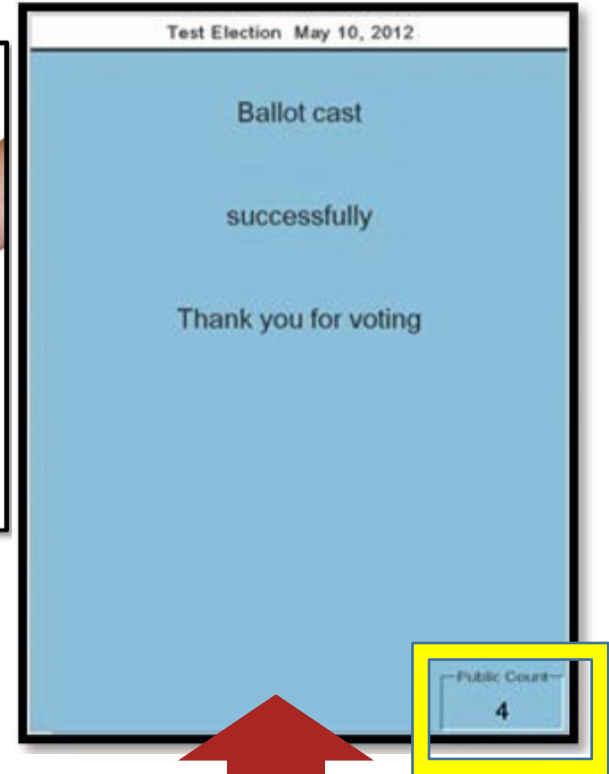

After the ballot is scanned, the OVO screen will display "Ballot cast successfully Thank you for voting". The public count in the bottom right corner will increase by one.




Three Instances That Require A Vote Center Techs Assistance



1) The OVO screen displays the “Election Password Screen” below.



2) The FVT screen displays the “Printer Error” screen below.

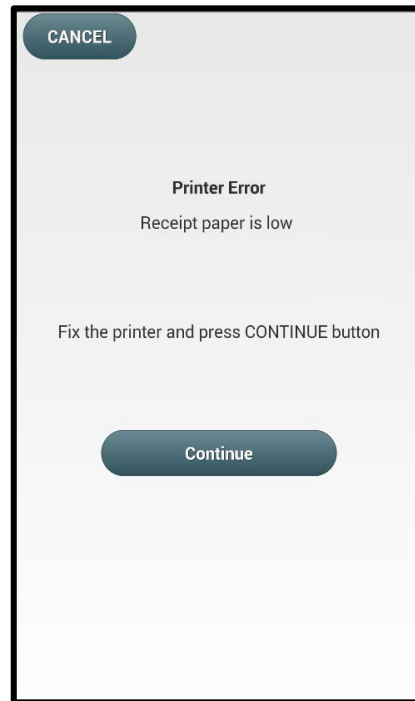

3) A voter requires a manual entry ballot on the FVT without a QR code from the pollbook.

